

Hudson Easy Maintenance Guide

Always release pressure before performing any maintenance on the sprayer.

Q & A:

What do I do if my sprayer...

...LEAKS AT PUMP SEAL?
Clean or replace cylinder gasket or for metal models with poly funnel replace tank gasket.

...LEAKS AT NOZZLE?
Clean or replace O-ring seal.

...WON'T BUILD PRESSURE?

1. Unthread pump cap and pull plunger from cylinder.
2. Lubricate plunger cup with petroleum jelly or replace if worn.
3. Clean or replace pump valve in base of cylinder.

What if the ROTO-VALVE™ won't shut off?

Replace O-ring on shut off. (Older models replace V-ring with O-ring.)


What if the ROTO-VALVE leaks at the wand connection?

Clean or replace O-ring on valve stem. Clean or replace O-ring in wand.

What if my PLASTIC VALVE/WAND leaks or won't shut off?

Replace valve/wand.

Where to Find Parts in This Guide:

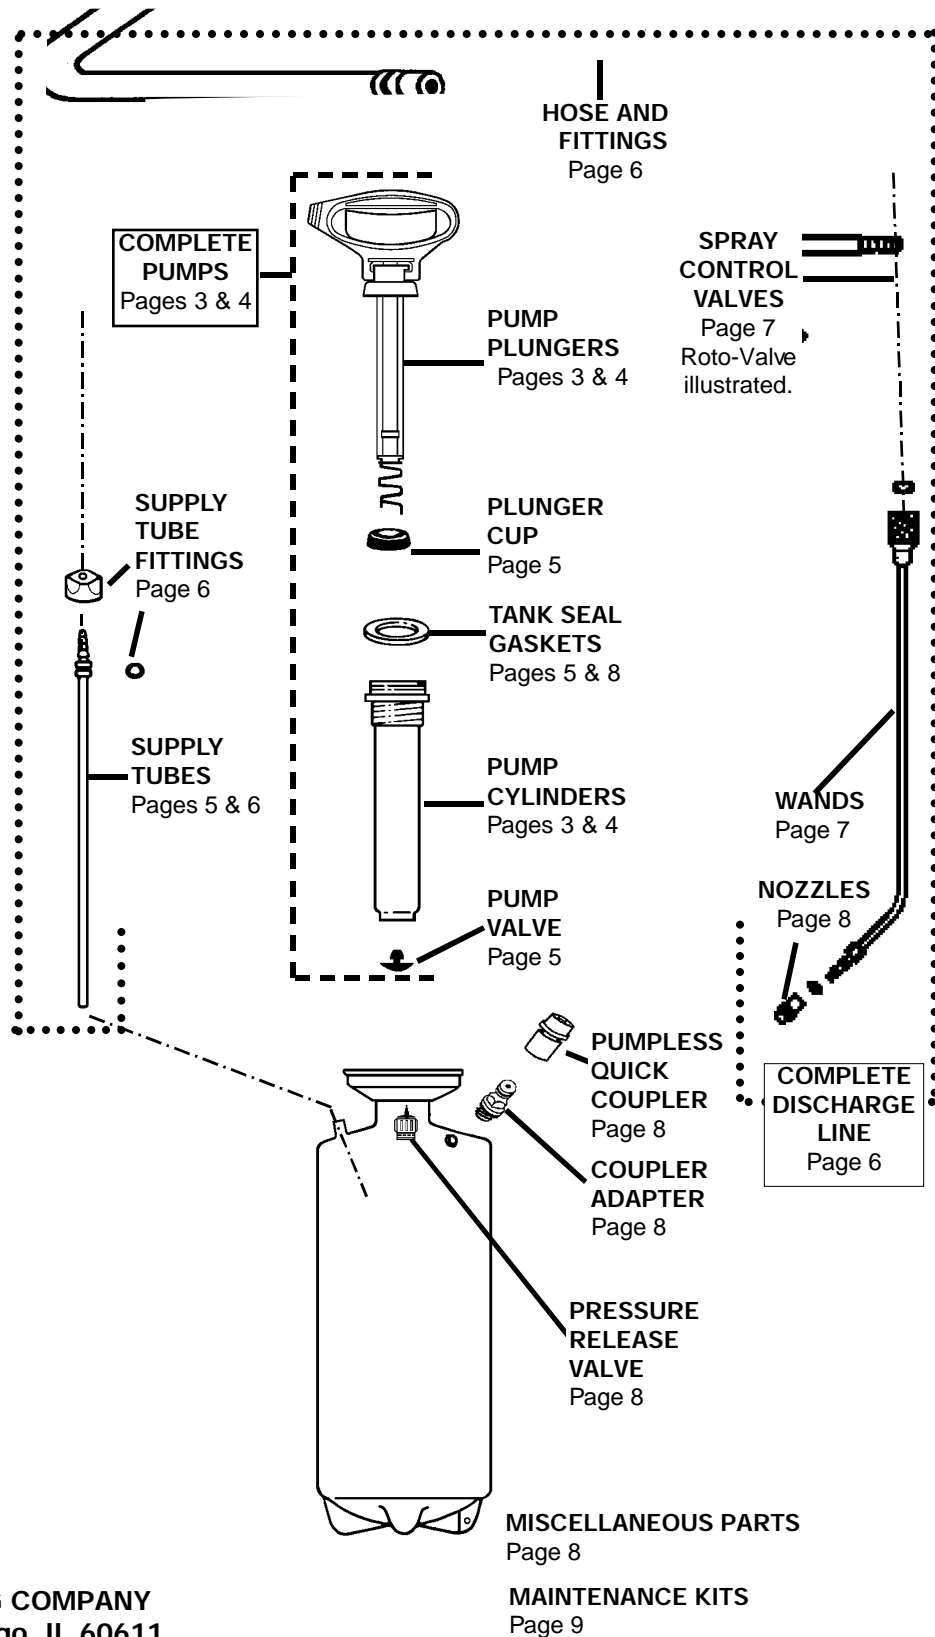

H. D. HUDSON MANUFACTURING COMPANY
500 N. Michigan Avenue • Chicago, IL 60611
Phone: 312-644-2830 • FAX: 312-644-7989
www.hdhudson.com • E-Mail: